

## DRAGON SETUP. 9/16/23.

Rfb.

1. Move up Dragon from the annex, using the hitch and a tractor.



2. Move bucket stands from the storage shed.



3. Remove wheels: Use piston to push down front stand, raising the front wheels off the ground. Remove cotter pin and remove wheels.



4. Raise the back end by hand and extend the rear jack supports, inserting the pins to hold up the jack.






5. Raise the front and set the front jack supports. Insert the pin to hold the jack. Note the wheels are off and the hydraulically operated jack is retracted.



6. Remove conveyor belt from storage shed and mount top to dragon and bottom clamped to support on bench.



7. Attach motor coupling with hose and 2 alligator clamps.

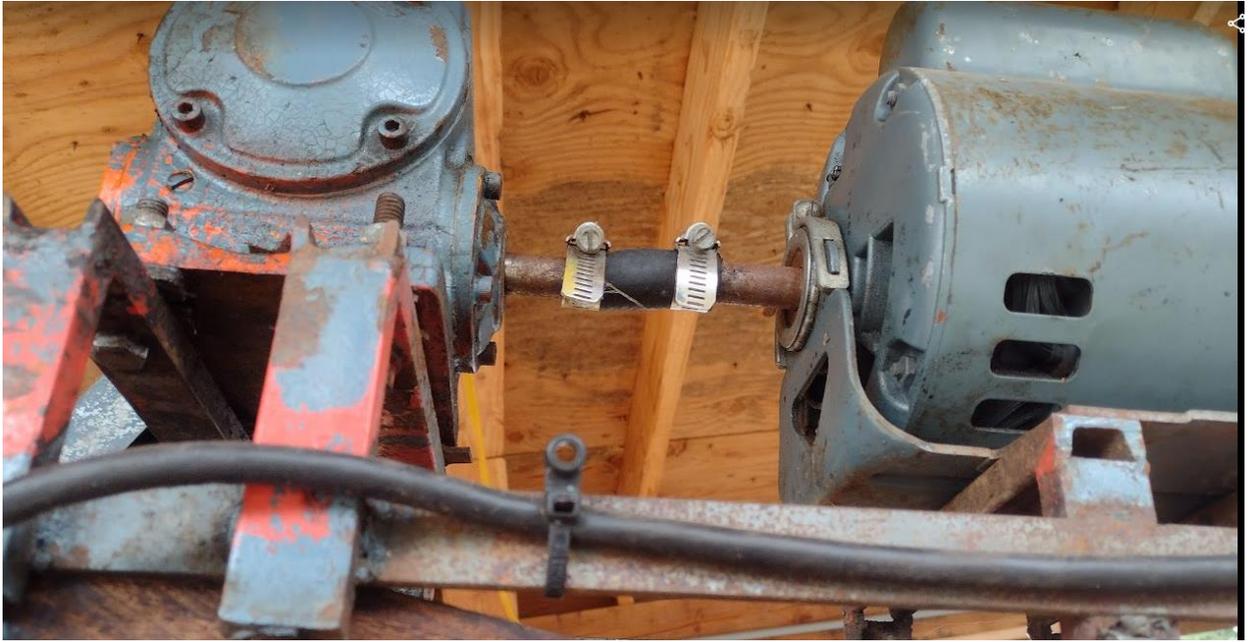

7. Setup spray using microphone stand from AB storeroom and a sprayer from the garden. Hold in place with clamps and duct tape.



8. Fill the 2 plastic buckets with water. Fill the wood bucket with water and let it soak at least 2 weeks to allow the wood to expand and seal the bucket.

9. Wash everything down with soap and water.



**OPERATION**





